




PIPE AND DRAPE SET-UP INSTRUCTIONS


- 1** Remove the screw from the bottom of the pin. Place the screw through the desired pin hole on the base and tighten the pin until secure.




We give the bases preassembled, so skip step one!

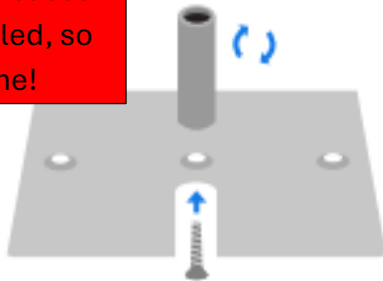

- 2** Place the Upright over the pin.

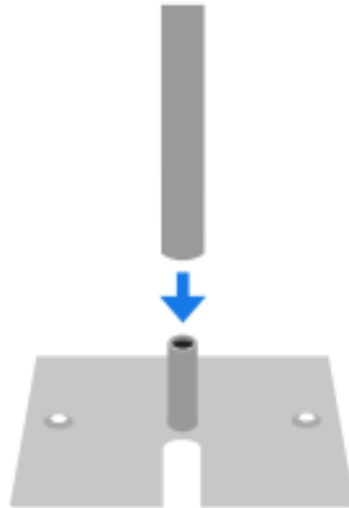

- 3** String drape onto the Drape Support before hanging.

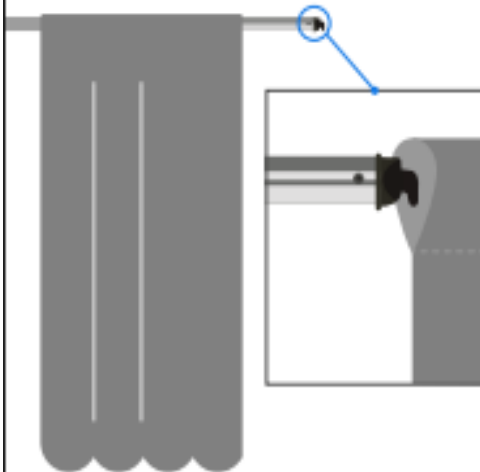

- 4** Attach each Hook End of the Drape Support to the top of the Upright.

